



Oscillating Edge Sander

- **NEVER LEAVE SANDERS RUNNING UNATTENDED.**
- **ALWAYS MAINTAIN SECURE FOOTING AROUND THE SANDER.**
- **NEVER WEAR GLOVES, LOOSE CLOTHING, JEWELRY, NECKTIES, OR LONG LOOSE HAIR NEAR SANDERS.**
- **NEVER LEAN OVER OR REACH UNDER RUNNING SANDERS.**
- **NEVER POWER SAND METALS, INCLUDING NAILS, SCREWS, OR OTHER FASTENERS IN THE WOOD. (Sparks can ignite air borne sawdust. Countersink fasteners below wood surface before sanding)**
- **NEVER POWER SAND PAINTED WOOD OR OTHER MATERIALS IN THE DESIGN SHOP.**
- **ALWAYS RUN DUST COLLECTOR WHEN SANDING.**

1. **Configuration: belt sander**
2. **Action: rough sands and shapes**
3. **Adjustments:**
 - a. **Belt rotates from vertical to horizontal. DO NOT CHANGE WITHOUT PERMISSION OF SHOP PERSONNEL.**
 - b. **table tilt 0°/ 45°/ 90°**
 - c. **Miter gauge can be used**